

# THOR – MEGINGJÖRD

*User guide*



## Indicator light:

You find the indicator light in the top right corner of the keyboard.



1. Num Lock LED: turns on when Num Lock key is pressed



2. Caps Lock LED: turns on when Caps Lock key is pressed



3. Scroll Lock LED: turns on when Scroll Lock key is pressed



4. Windows Lock LED: turns on when Fn+Windows is pressed

System requirements:

Windows: 98/2000/ME/XP/VISTA/Win7/8/10

Dimensions:

441.9\*184.9\*37.8mm

Weight:

1.100±30g

# THOR – MEGINGJÖRD

## User guide

1. Mechanical carbon-look gaming keyboard with RGB effects and build-in ergonomic wrist rest
2. Full 105 key anti-ghosting & N-key rollover
3. Outemu Blue (Tactile) switches
4. Switch lifetime is 50 million click
5. 105 key layout with 5 programmable macro keys & 12 multimedia keys (F1–F12)
6. “Plug and Play” – no driver needed, easy to operate

## Macro keys:

1. Enter macro recording mode
  2. Press Fn+the macro key you wish to use (Y, U, I, O, P)  
The chosen macro key will now start to blink, which means that you are ready to record your macro.
  3. Enter the keystrokes you wish to record, any letters or number combination, and press Fn+Insert to save the macro recording.  
The programmed macro key will now stop blinking.
  4. Test your macro to confirm proper operation. If you created a text macro, open Notepad or any other text editing program and press Fn+the macro key to test.  
Example:  
Press Fn+Y: the macro combination you have programmed on Key Y (G1) will be displayed on the screen.
- Press Fn+Delete for more than 5 seconds to restore the factory Settings. A quick white “snake”-light will confirm the reset.

## Multimedia keys:

There are 12 multimedia keys offering quick access to the most commonly used functions. Press Fn+F1 to F12 to activate the desired functions.

- |              |                |               |
|--------------|----------------|---------------|
| Media player | Player stop    | E-mail        |
| Volume down  | Previous track | Web/home      |
| Volume up    | Play & Pause   | Lock keyboard |
| Mute         | Next track     | Calculator    |

## 8 RGB LED Backlight Functions:

Switch between the 8 different LED backlight patterns.

Close or open backlight.

### IF YOU WANT TO ADJUST THE BRIGHTNESS:

Brightness up      Brightness down

### 1. RACING HORSE LIGHT MODE:

Switch color

Speed down      Speed up

Within the RACING HORSE LIGHT mode, press Fn+W: The four W, A, S, D -keys and the four ↑, ↓, ←, → -keys will change places and function.

### 2. COLORFUL LIGHTING MODE:

#### 3. SINGLE WHITE MODE:

Customize the light on the keys to any combination you like. Press Fn+Pause to save.

#### 4. CONSTANT LIGHTNING MODE:

Switch color  
You can enter this mode again and again to make any color key combination you like.

#### 5. BREATHING LED MODE:

Switch color

#### 6. OPEN LIGHT IN KEYS MODE:

Switch color  
Not light is present in the keys, but:  
Press any key and it will light up for a short while, and slowly fade out again.

#### 7. CLOSE LIGHT IN KEYS MODE:

Switch color  
All keys will lit up, but:  
Press any key and the light will go out for a short while, and slowly fade in again.

#### 8. WATER LINES / RIPPLE MODE:

Switch color  
Cool ripple effect that begins from the key you press.